

Quick Reference Guide

CREDIT CARD PURCHASE

Terminal Prompt

Credit...Sale Account Credit...Sale Amount Dialing, Processing, Approved Swipe card or manually enter credit card number, then press **ENTER**. Enter amount of sale (no need to press decimal). Terminal returns to original prompt, "Credit...Sale Account".

CREDIT CARD SALE (WITH AVS OPTION)

Terminal Prompt

Action

Action

CreditSale Account
CreditSale Amount
Enter Zip Code
P.O.B or House #
Dialing, Processing, Approved

Swipe card or manually enter credit card number, then press ENTER.
Enter amount of sale (no need to press decimal).
Enter customer's zip code (billing address).
Enter number of address only.
Terminal returns to original prompt, "Credit...Sale Account".

CREDIT CARD RETURN

Terminal Prompt Credit...Sale Account Credit...Return Account Credit...Return Amount Enter Auth. No

Dialing, Processing, Approved

Press the UP ARROW key three times. Swipe the credit card, or manually key in the account number, then press **ENTER**. Enter amount of return (no need to press decimal), then press **ENTER**. Type in authorization code on the original sale receipt, then press **ENTER**. Terminal returns to original prompt, "Credit...Sale Account"

VOID SALE

Terminal Prompt

Colo Account

Action

Action

Credit...Sale Account

Credit...Void/Sale Account Credit...Void/Sale Amount Approved Off Line Press the UP ARROW key four times. Press the UP ARROW key again to void returns and press the UP ARROW key one more time to void force transactions. Swipe the credit card, or manually key in the account number, then press **ENTER**. Enter amount of void (no need to press decimal), then press **ENTER**. Terminal returns to original prompt, "Credit...Sale Account".



Quick Reference Guide

FORCED CREDIT CARD SALE

Terminal Prompt

Credit...Sale Account Credit...Forced Account Credit...Forced Amount Enter Auth. No Approved Off Line Action

Press the UP ARROW key one time. Swipe the credit card or manually key in the account number, then press **ENTER**. Enter amount of sale (no need to press decimal). Enter authorization number obtained through voice auth. Tear slip and have customer sign receipt.

BATCHING/SETTLEMENT

Terminal Prompt

Action

Credit...Sale Account Choose Host: 1. All Dialing, 18005559999 Press the **F** key followed by the number **6** to select batch at the menu. Make selection by pressing **ENTER**. Terminal will print detailed batch report.

COPY OF TRANSACTION RECEIPT

Terminal Prompt

Action

Press the **MENU** key. Use the **FORCED** key to scroll through options. Make selection by pressing **ENTER**. Go to reports.

Go to option 5. Receipt Copy and choose an option (if you choose any receipt you have to enter the transaction # from receipt).

Enter transaction number and press **ENTER**.

Credit...Sale Account Menu Screen: 1. Reports 2. Merch. Params Reports: 1. Default Report 2. Current Report Receipt Copy: 1. Last Cust. Rcpt 2. Any Receipt 3. Last Mrch. Rcpt Transaction #



NURIT 8020/8000

By default, the terminal will try to process transactions using wireless service. If wireless service is unavailable, the terminal will check for a phone line to use. Only do the following if you want the terminal to dial using only the phone. Quick Reference Guide

SWITCHING COMMUNICATION BETWEEN LINE/RADIO

Terminal Prompt	Action
CreditSale Account	Press the MENU key.
Menu Screen:	Scroll down through the different options using the FORCED key until you see:
2. Reports	8. Communication, then press ENTER.
3. Merch. Params	
Comm Menu:	Scroll down through the different options using the FORCED key until you see:
1. Min. retries	6. Via: Line/Radio, then press ENTER.
2. Dial : Tone	
Line/Radio:	Scroll/Highlight the option you want using the FORCED or RETURN keys or press the
1. Both	corresponding #, 1 or 2 in this case.
2. Line Only	
Comm Menu:	Press MENU twice.
6. Via: (The Option Selected)	
7. Chk Line: On	
CreditSale Account	Terminal returns to original prompt, CreditSale Account.